

## Code 70 key tube SKG\*\*

Instructions for use for Code 70 key tube SKG\*\*:  
Please read this manual carefully before using your  
key tube.



### General information

- The factory preset code is 3-3-3-3.
- Change this code into your own personal code immediately after placing the key tube!
- Do not choose 0-0-0-0 as your personal code.
- When setting the new code or when changing a code, the flats of the code element must be equal to the flats of the housing (tube). (\*)
- Change your personal code regularly and do not share the code with more than five people.
- Remember your new personal code and register it in a safe place (if you have lost it, the key tube can only be opened by force and it can not be used again).
- When opening the key tube, the entered personal code will automatically be in a neutral position.
- It is not necessary to enter the code again to lock the key tube.

### Change code

1. Enter current factory code (3-3-3-3) while using the key tube for the first time.
2. Press the program button with a pointy object, for example a pen. Fully press and hold.
3. Set new personal code.
4. Release programming button to set the code.