

# L&F 2800 mechanical lock

Manual for the L&F 2800 mechanical lock.  
This lock is used on the key cabinets SLN, SLA, SLR  
and SLP on the M-models.

Make sure to read the manual completely before using  
your key cabinet.



## Set a new user code

- ⇒ Select current user code (default **2 2 4 4**).
- ⇒ Turn handle to activate code change button. It will appear on the right side of the lock.
- ⇒ Press and hold code change button then rotate individual wheels to select new user code.
- ⇒ Release code change button to set user code.
- ⇒ Make sure you try the new code a couple of times before locking the door. After closing the door, please scramble the code.

## Emergency key override & code finder instruction

- ⇒ Insert master key override and turn 90° clockwise.
- ⇒ Lightly rotate individual wheels (upwards) until each one locks into position. The user code is now identified.
- ⇒ Turn key 90° anti-clockwise and remove the key from the lock.
- ⇒ Refer to user instructions for procedure to set new user code.
- ⇒ Please store the emergency key in a safe place and not inside the key cabinet!