

L&F 3780 electronic lock

This lock is used on the series SLA, SLN, SLR and SLP on all the E-models.

Safety warning: all codes must be safely stored. Do ***NOT*** use any personal records (birthdays, phone numbers etc.) as a code. Change the factory code immediately before using your key cabinet!



Important!

- After you have received your key cabinet we strongly advice to change the codes before using it.
- Please remember to always keep the door of the cabinet in an open position whilst changing the code.
- Please do not store the emergency key inside the cabinet, but in a different safe place.

Basic information about the codes

- The lock has 3 different kind of codes:
 1. Master code
 2. Sub-master code
 3. User code
- The lock is programmed with 2 factory codes:
 1. Master code: **1 1 3 3 5 5 7 7**
 2. User code: **2 2 4 4**
- The master code has 8 digits
- The user code has 4 digits
- The lock will close automatically after 4 seconds after the code has been entered.

Options per code

- The master code has 3 options:
 1. Opening the lock
 2. Changing the master code
 3. Set, change or delete the sub-master code and the user code
- The sub-master code has 3 options:
 1. Opening the lock
 2. Changing the sub-master code
 3. Set, change or delete the user code
- The user code has 2 options:
 1. Opening the lock
 2. Changing the user code

Penalty time

After entering the wrong code 3 times, the lock will be blocked for 10 seconds.

Changing the batteries and using the emergency key

When the batteries are almost out, the lock will show a blinking red light. Please change the batteries as soon as possible.

You can check the batteries by pushing the big button on the lock twice.

When the batteries have completely gone out, you can always open the cabinet by using the emergency key. Please change the batteries as soon as possible.

L&F 3780 electronic lock

This lock is used on the series SLA, SLN, SLR and SLP on all the E-models.

Programming the master code options

Changing the master code:

Instruction: Push the OK button—enter the old master code—01—enter the new master code—repeat the new master code

Example: OK button—11335577—01— 12345678—12345678

Result: You have changed the master code to 12345678

Changing the user code:

Instruction: Push the OK button—enter the master code—02—enter the new user code

Example: OK button—11335577—02— 1111

Result: You have changed the user code to 1111

Changing the sub-master code:

Instruction: Push the OK button—enter the master code—03—enter the new sub-master code

Example: OK button—11335577—03— 121212

Result: You have changed the sub-master code to 121212

Deleting the sub-master code:

Instruction: Push the OK button—enter the master code—07—

Example: OK button—11335577—07

Result: You have deleted the sub-master code

Programming the sub-master code options

Changing the sub-master code:

Instruction: Push the OK button—enter the sub-master code—03—enter the new sub-master code

Example: OK button—121212—03— 112233

Result: You have changed the sub-master code to 112233

Changing the user code:

Instruction: Push the OK button—enter the sub-master code—02—enter the new user code

Example: OK button—121212—02— 1234

Result: You have changed the user code to 1234

Safety warning: all codes must be safely stored. Do ***NOT*** use any personal records (birthdays, phone numbers etc.) as a code. Change the factory code immediately before using your key cabinet!

Programming the user code options

Changing the user code:

Instruction: Push the OK button—enter the user code—02—enter the new user code—repeat the new user code

Example: OK button—2244—02— 4321—4321

Result: You have changed the user code to 4321